

 SERVICE BULLETIN	model number	bulletin number 00019
	for serial numbers	
	subject ALL UNITS PLAYBACK SYSTEM	
	technical services approval <i>J. Ham</i>	writer <i>H. Morris</i>
engineering approval <i>J.R.T.</i>	date 3/31/80	

SYMPTOM

The PIANOCORDER Reproducing System plays the first selection on the tape and the next selection will not play (fine tuning lamp will not go out) until the pause button is depressed then released.

POSSIBLE CAUSE

This symptom is usually caused by three-quarter bit and range-control maladjustments.

SOLUTION

- A. Remove lower frame from piano. Slightly turn the range control pot (second from bottom) clockwise about one eighth to one quarter of a turn then stop.
- B. Push play button and let tape run until the next selection. The fine tuning lamp should come on then go off; and, the next selection should start. If the lamp still does not go out, return range control to original position.
- C. Now turn range control the same amount in the opposite direction, test again. This adjustment should cure problem. Turn tempo control full swing while watching that the fine tuning lamp does not come on or blink.
- D. Refer to section 10 in the Installation, Alignment and Field Service Manual if the above solutions did not solve the problem.

