

## OPERATING INSTRUCTIONS FOR THE ENTERTAINER

The Entertainer uses a Pianocorder System to activate the piano and instruments. With this packet you will find an Operations Manual for the PC-1145 piano. The operations are similar to the Entertainer, however, the location of the various devices may be different.

You will find the Entertainer's 8-track and cassette players by opening the door in the lower panel. Your coin box is also located here. The On/Off switch and function switches are attached to the inside of this door.

Keys - The keys, taped to the keyboard cover, will lock and unlock the keyboard cover, coin box/tape player door and the door to the instrument boards (back panel). This back door should not be opened except by an authorized service person.

Tuning the Piano - Your piano will require periodic tuning as any fine piano. We have designed the Entertainer so that it can be readied for tuning in just a few minutes.

First - Remove the front glass panel. Removing the panel will require your taking out two screws holding in the panel. Lift the piano lid and observe the screws on either side. After removing the screws lift the front out carefully. If this is a coin-operated unit there will be wires attached to the coin receptor. About six inches or so down the wires from the coin receptor you will find an "easy connect". Simply pull this apart then remove the glass panel.

Second - Go to the back of the Entertainer and you will find near the top a screw on each side. Remove these.

Third - Now carefully tilt back the instrument shelf (this is attached to the back and lid) until it comes to a stop. This will be at about an 80° angle. Be careful not to let the shelf "bang back" as this could cause some damage. The tuning pins are now exposed and the piano is ready for tuning. After tuning, reverse the procedure being careful that the wires are tucked in and do not get caught between any panels that may cause a break in the wires.

Removal of the Front Bottom Panel - This panel should only be removed by an authorized service person. Under normal circumstances you should only have to remove this panel for servicing the unit. In order to remove the panel, first open the coin box door. Remove the screws holding the switches to the door. Now remove the two screws at the top of the panel. Carefully remove the panel.

NOTE: In manufacturing, a plastic cover is used to shield the pedal solenoids from dirt. The plastic cover should be removed prior to shipping, however, you should check to see if it has been removed before you use your Entertainer. You can check it out by opening the coin box door. Observe the left-hand corner area for any plastic wrapping. If it is still covering the solenoids then remove.